


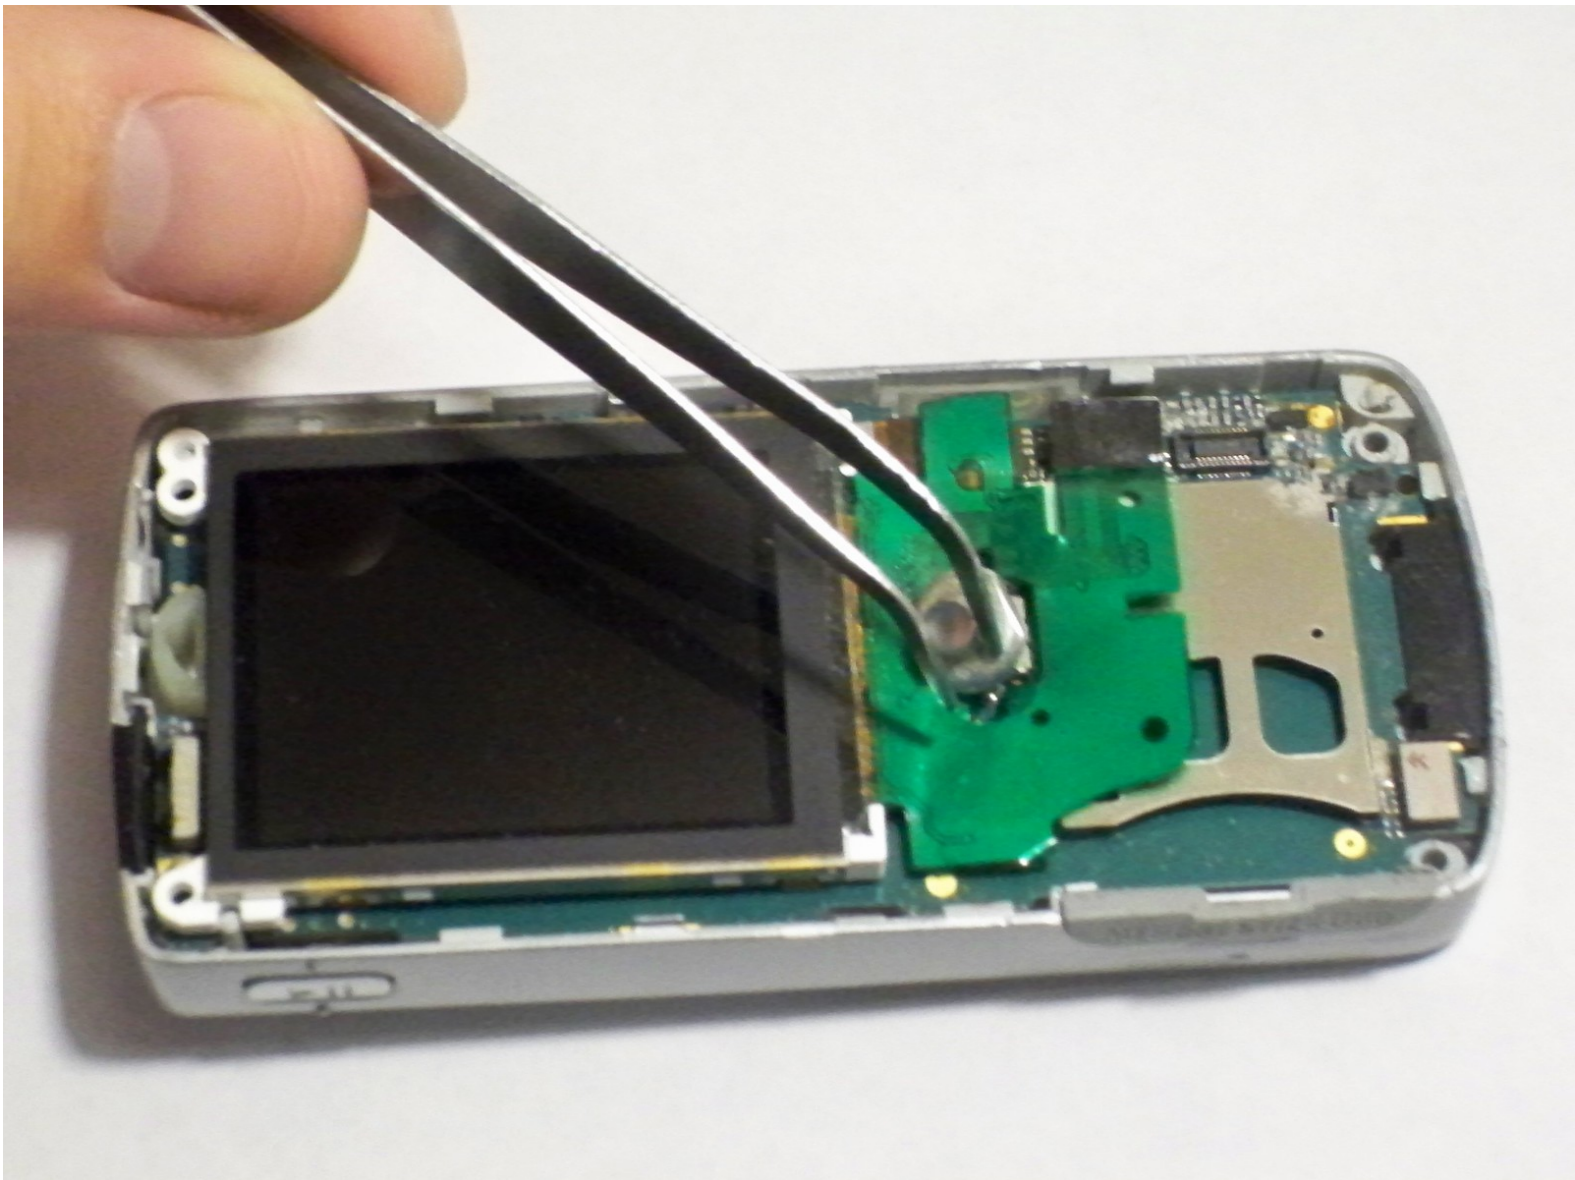

Sony Ericsson K750i Joystick Replacement

This guide will illustrate the removal or replacement of the joystick.

Written By: Abby Evers





TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
 - [T6 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery Cover



- Remove battery cover
- Press down firmly with thumb and slide cover back

Step 2 — Back Casing

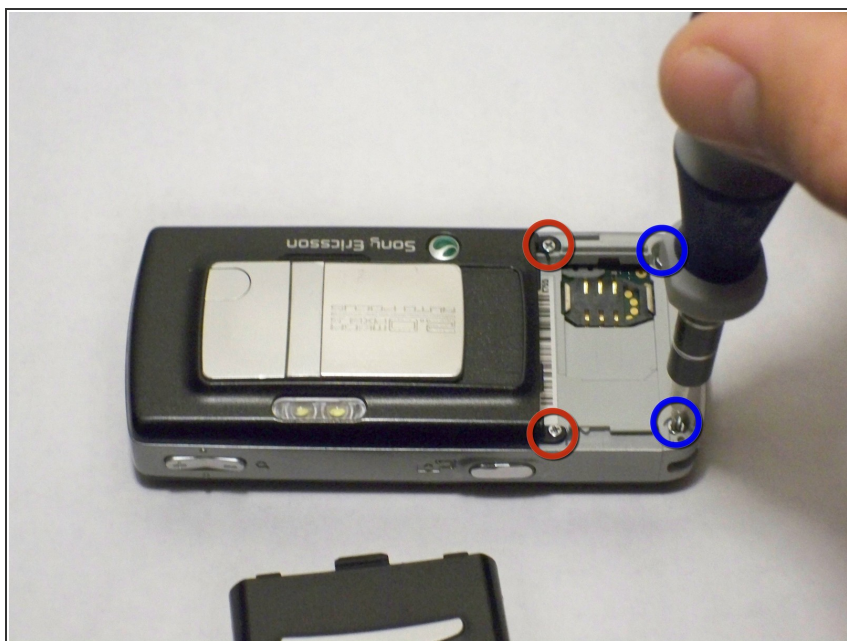


- Remove 4 screws from battery chamber
- Red - Phillips 0 screwdriver
- Blue - Torx 6 screwdriver

Step 3



- Gently pry off back casing
- **Note:** work shim or flathead screwdriver around entire seam before attempting to pull off casing. This will reduce the chance of cracking the casing.

Step 4

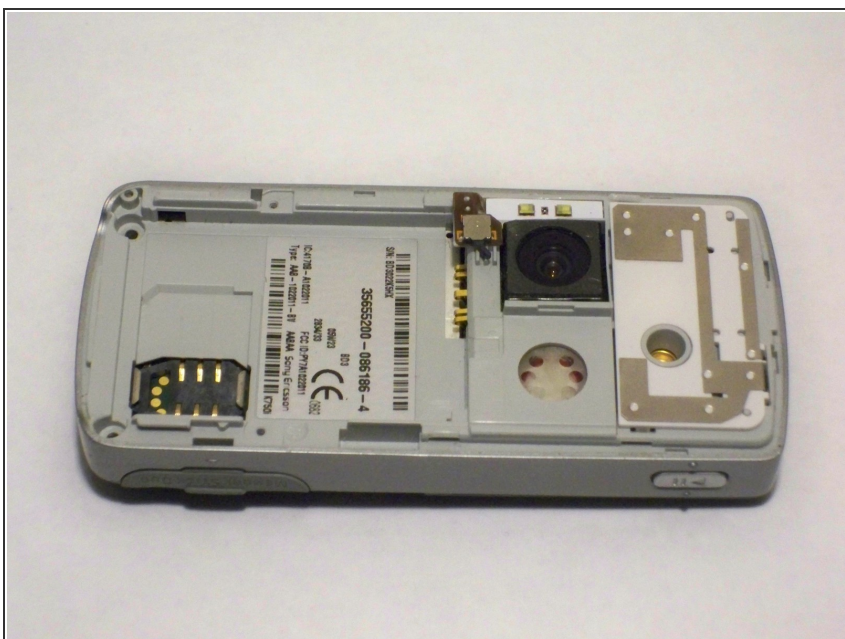

- Remove casing to expose camera components

Step 5 — Keypad




- Gently pry open front casing by working a small shim or flathead screwdriver along the entire seam

Step 6




- Remove front casing by gently lifting it from the phone
- Be careful not to pull off any other delicate pieces

Step 7

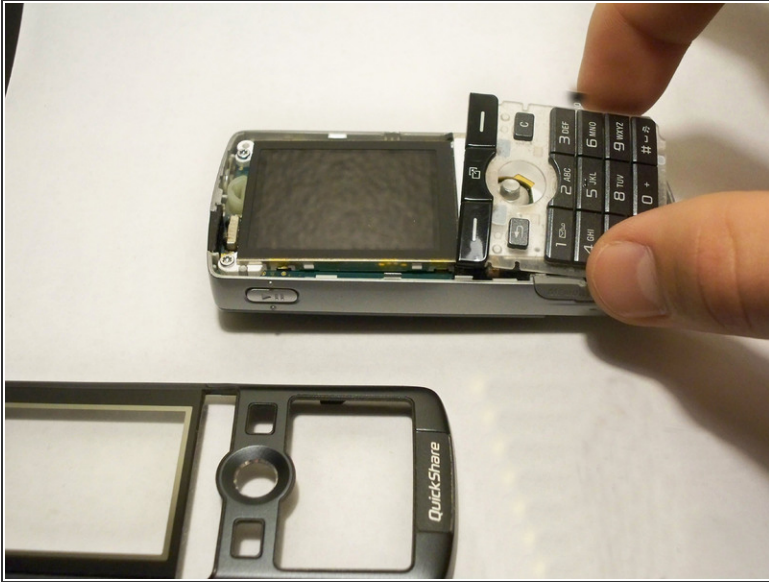

- Keypad should be easy to remove
- **Caution:** LCD screen is very fragile. Be careful not to catch the keypad on it while removing.

Step 8 — Joystick

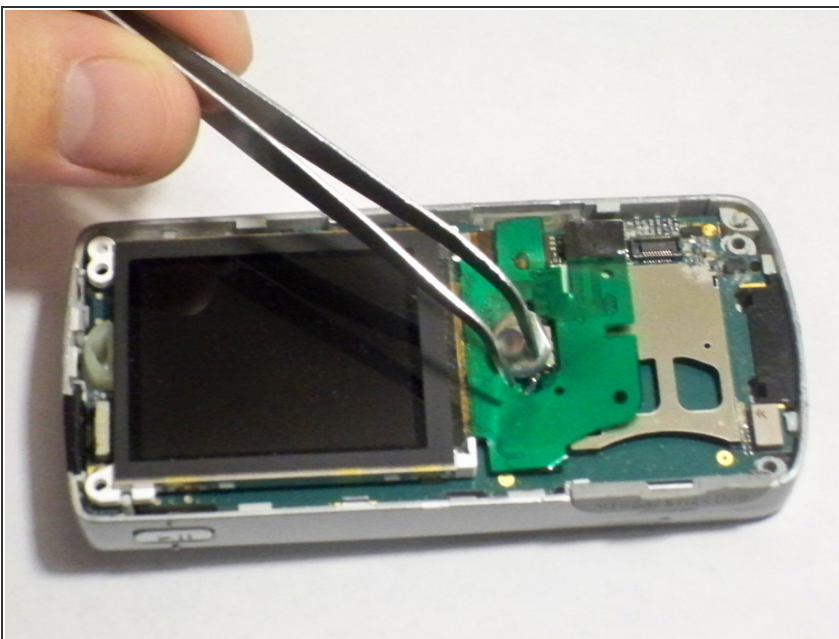

- Use tweezers to get a grip on the joystick
- Pull off
- **Warning:** the green film surrounding the joystick is fragile. Take care not to puncture or rip it.

To reassemble your device, follow these instructions in reverse order.

